




3D drawings are available on vuototecnica.net



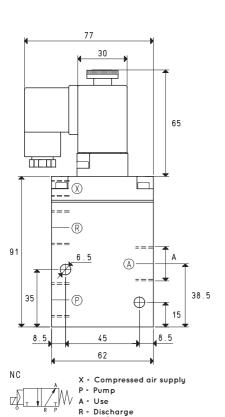

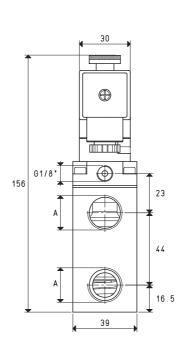

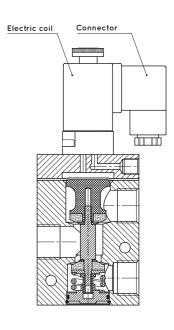

NO .	X =	Compressed air supply
	P=	Discharge
	A =	Use
O R P	R=	Pump

Item	A	Max flow rate	Level of vacuum abs. mbar			Reaction time msec		Cross-section of passage	Pressure at servo-controlled	Weight
	Ø	m³/h	min	max	energ.	de-energ.	Ø	mm²	*bar	Kg
07 03 11	G1/2"	20	1000	0.5	16	40	15.0	176	6 ÷ 8	0.73

^{*} Add the letters LP to the item for servo-controlled pressures 4 - 6 bar.

Note: The coil and the connector are not integral parts of the solenoid valve and, therefore, must be ordered separately (See accessories for solenoid valves).

Solenoid valve servo-controlled power must be supplied with non-lubricated compressed air, 5 micron filtration, according to standard ISO 8573-1 class 4.